

# GEOCHRON<sup>®</sup>

A timepiece. A masterpiece.<sup>™</sup>

## IMPORTANT PACKING INSTRUCTIONS REGARDING YOUR GEOCHRON

When packing your GEOCHRON please follow these steps:

1. Set the date on the GEOCHRON to February 9<sup>th</sup>.
2. **LOCK THE MECHANISM SCREWS** (Located on the back, bottom middle section of the GEOCHRON.)
3. After locking the Mechanism Screws set the date on the GEOCHRON to March 21<sup>st</sup>.




4. Roll up the electrical cord and tape the cord to the bottom of the unit.
5. Tape an "X" across the Glass with painters masking tape.
6. Place the Geochron in a Poly Clear Bag, tape end closed.
7. Attach the 2 Inner End Foam Blocks and Inner Foam Flat Block as shown in the picture below.



8. Seal one end of the Inner Box with packing tape. Slide the Geochron into the Inner Box and seal open end of box with packing tape.



9. Attach the four outer foam corner blocks to the inner box as shown in the picture below.

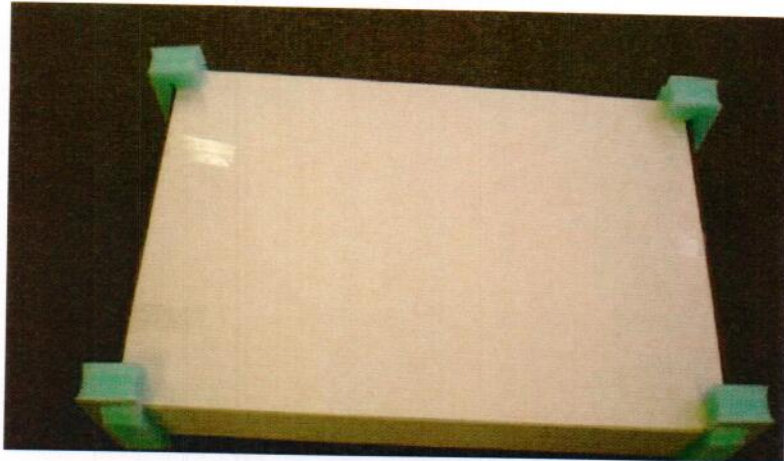

**OUTER FOAM CORNER BLOCKS**

If your corner blocks do not look like this you will need to flip open the tab so that the block will fit over the box.



10. There are 4 Angle board pieces that go one in each corner of the Outer Box. Place those in the corners and then slide the Inner box into the GEOCHRON Outer box. Seal the open end of the Outer box securely with tape or staples.








## INSTRUCTIONS:

1. Fill out and enclose Return Authorization Form.
2. Set Geochron to Feb 9th and lock mechanism screws (Qty 2).
3. Set Geochron to March 21st after locking mechanism screws.
4. Roll up electrical cord and tape to bottom of unit.
5. Tape "X" across front panel glass as shown.
6. Place unit in Poly Clear bag and tape end closed.
7. Attach and secure top and bottom corner blocks as shown.

TYPICAL 1-1/2" WIDE MASKING TAPE  
ATTACH ACROSS GLASS PANEL

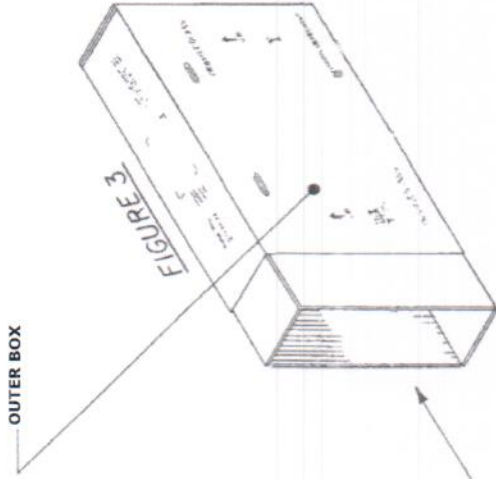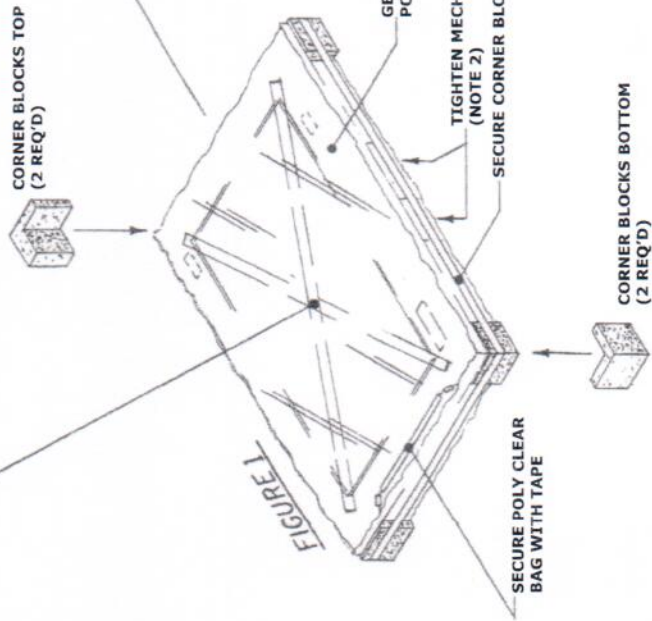

FOAM CORNER BLOCK (4 REQ'D)

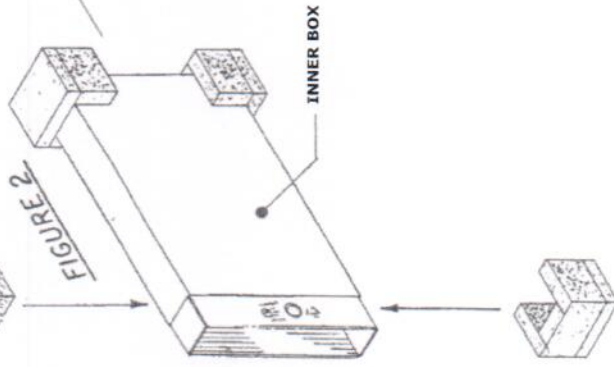

8. Seal one end of Inner Box with packing tape.
9. Slide Geochron into Inner Box and seal open end with packing tape.
10. Seal one end of Outer Box
11. Attach (2) foam Corner Blocks to Inner Box and slide into Outer Box.
12. Insert (2) additional foam Corner Blocks.
13. Seal both ends of the Outer Box with staples or packing tape.

**IMPORTANT RETURN PACKING INSTRUCTIONS**  
**PACKAGED UNIT 42" L X 28" H X 10" W**  
**WEIGHT 42 LBS**

# GEOCHRON®